


**SIDE VIEW OF
REMOVABLE COVER**

**CAUTION:
LIFTING AND HANDLING!**


1. Use 4 x Lifting holes in sides for lifting. Use only approved Lifting Dowels.
2. Never lift by cast-in studs or by attaching to the cantilever part to the left of "A".
3. Never lift without Removable Cover securely bolted.
4. Never lift plinth with any load or personnel on it.

**PLACING OF PLINTH ON
PREPARED FOUNDATION:**

1. Bearing capacity of ground 100kPa min.
2. Bedding under all beams: 25mm thick moist 5:1 riversand:cement levelled to ± 5 mm.
3. Plinth must be placed before setting of bedding cement or before 2 hours after adding water.

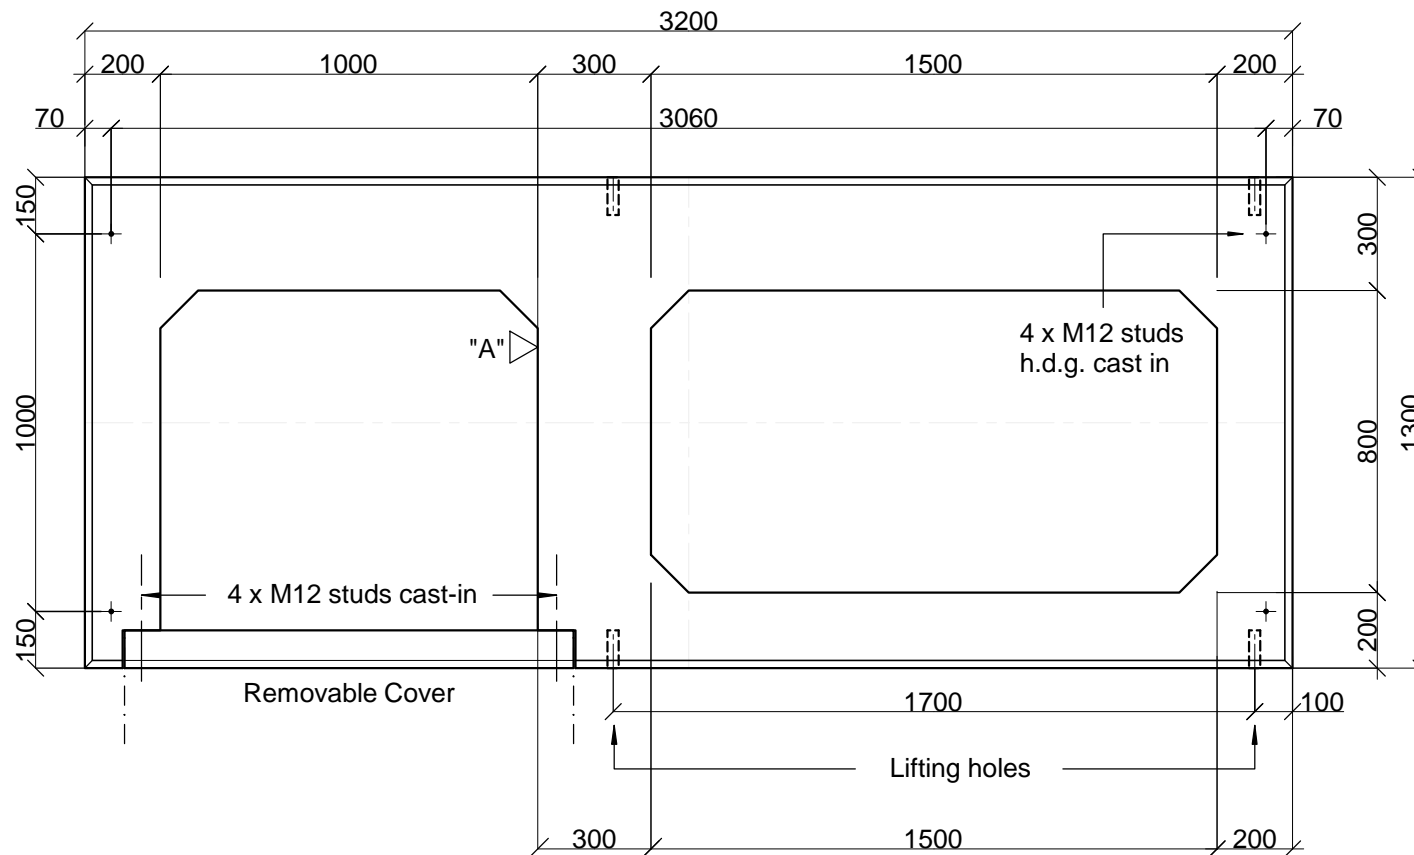

TOP VIEW

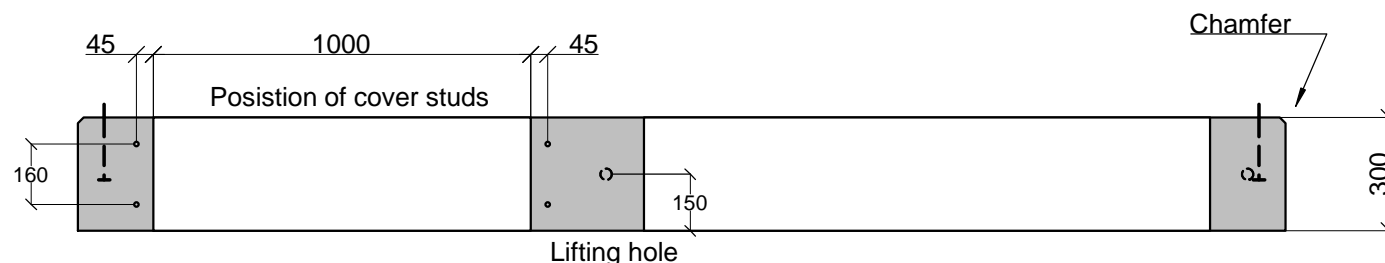

SECTION

**PLINTH FOR ACTOM 315KVA MINI SUBSTATION
P4-8104/4**

